

1991-1990 Honda Civic (ED3, ED6)




Electrical Connections [1.5 l]

FUSES

- ① ECU (15A)*
- ② No.14 (10A)
- ③ No.2 (10A)

- ④ No.1 (10A)
- ⑤ HAZARD (10A)*

* : In the under-hood fuse box

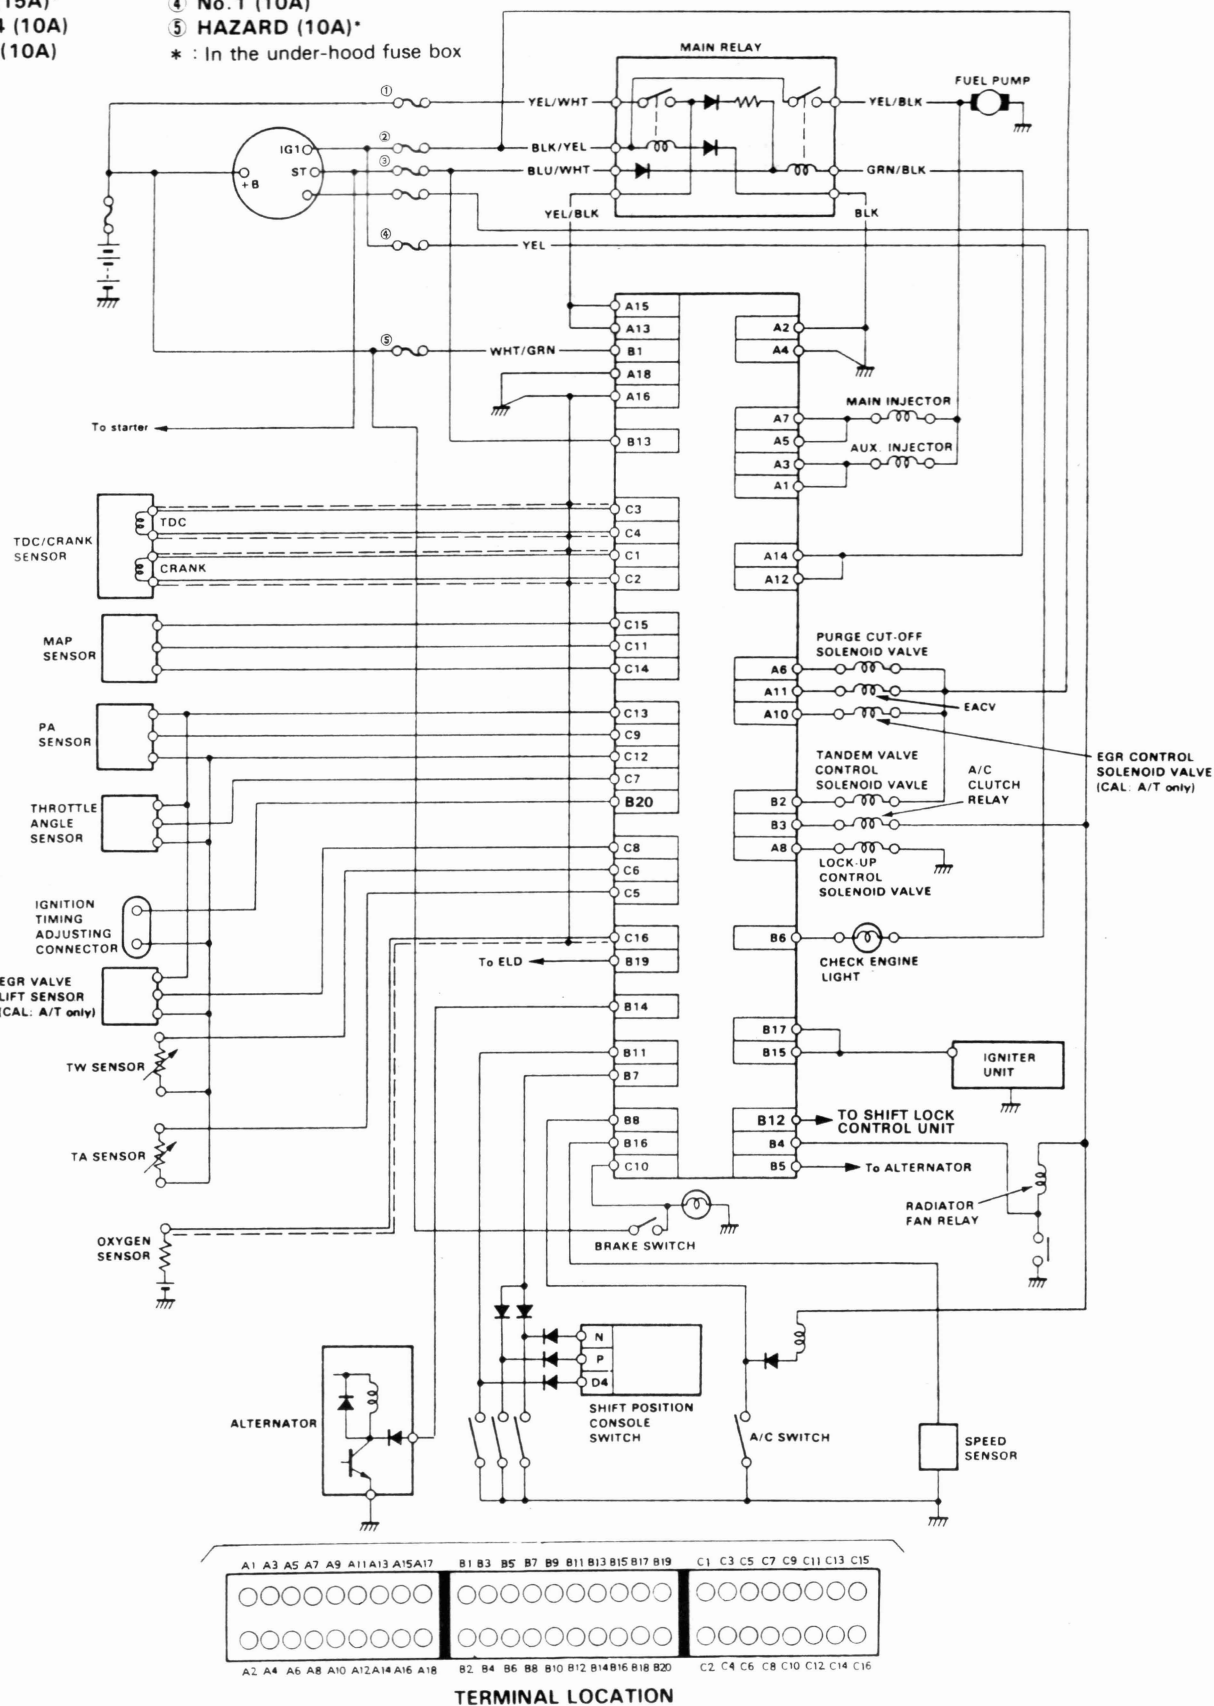


1991-1990 Honda Civic (ED4, ED7)

Electrical Connections [1.6 ℓ]

FUSES

- ① ECU (15A)* ④ No.1 (10A)
② No.14 (10A) ⑤ HAZARD (10A)*
③ No.2 (10A) *: In the under-hood fuse box

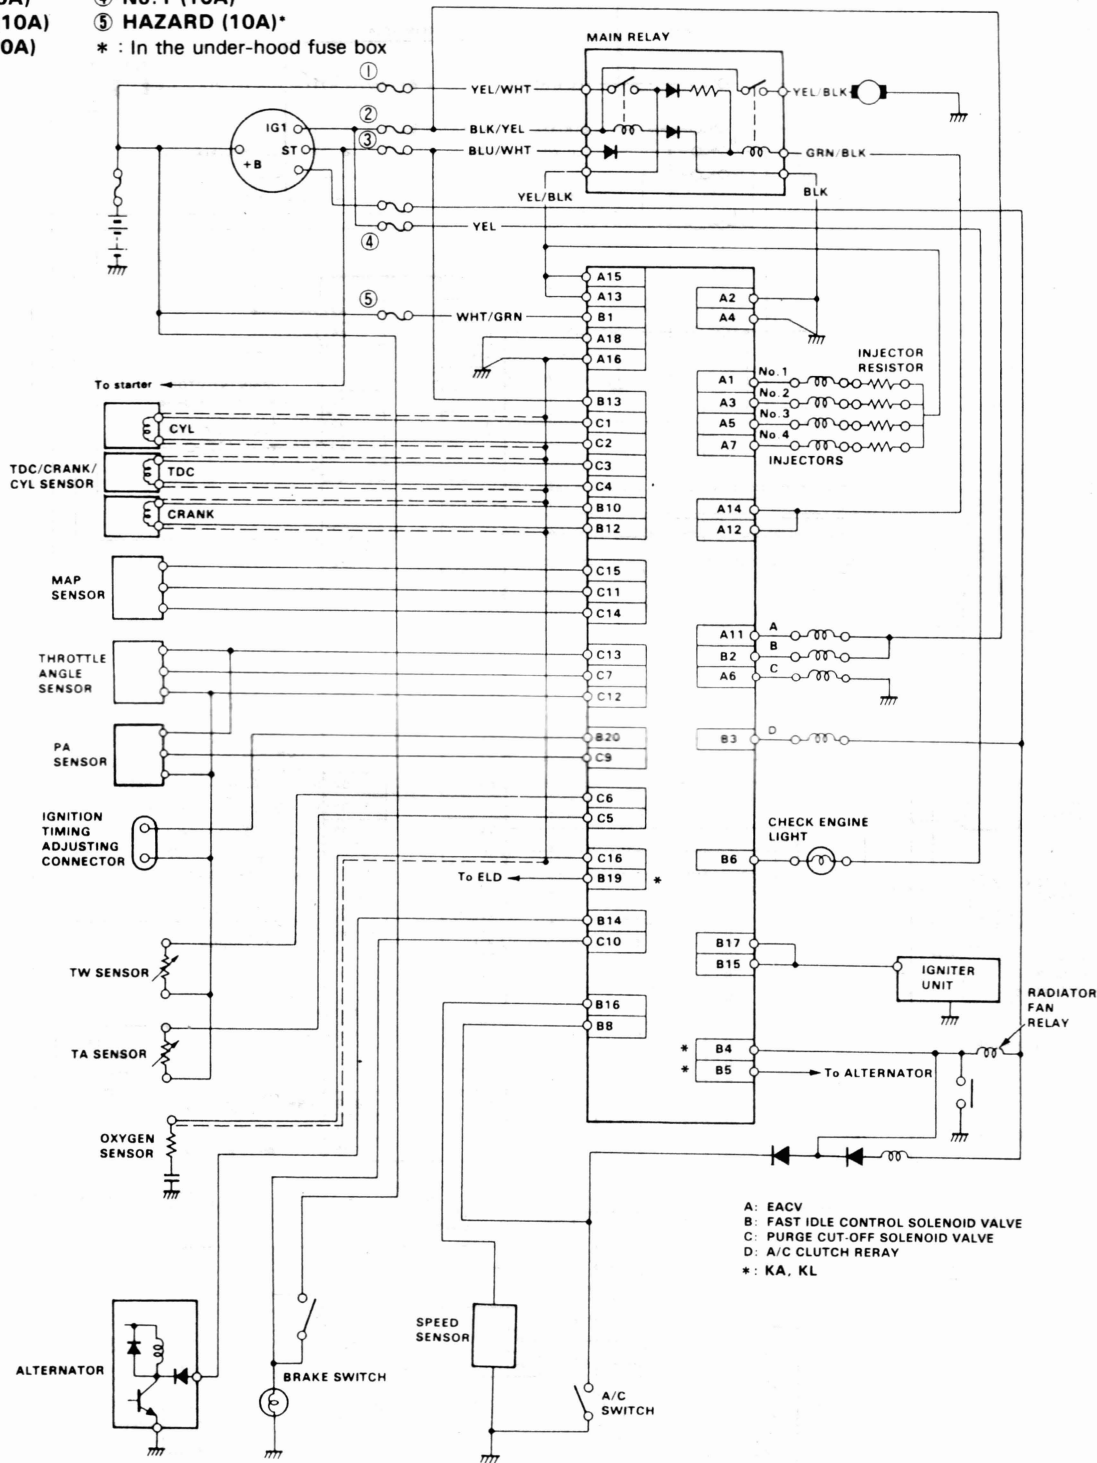

A1 A3 A5 A7 A9 A11A13A15A17	B1 B3 B5 B7 B9 B11B13B15B17 B19	C1 C3 C5 C7 C9 C11C13 C15
☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐	☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐	☐ ☐ ☐ ☐ ☐ ☐ ☐
☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐	☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐	☐ ☐ ☐ ☐ ☐ ☐ ☐
A2 A4 A6 A8 A10 A12A14A16 A18	B2 B4 B6 B8 B10 B12 B14B16B18 B20	C2 C4 C6 C8 C10 C12 C14 C16

TERMINAL LOCATION